




**A.** SET STAKES NO MORE THAN 3' APART AND DRIVE THEM INTO THE GROUND AT LEAST 8".

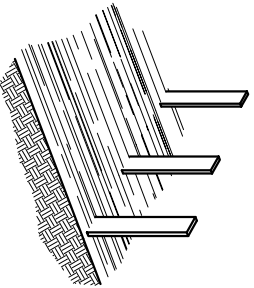




**B.** EXCAVATE A 4" x 4" TRENCH UP SLOPE ALONG THE LINE OF STAKES.

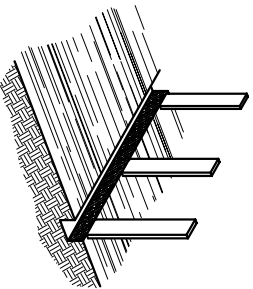

**C.** STAPLE FILTER MATERIAL ON UP SLOPE SIDE OF STAKES AND EXTEND IT INTO THE TRENCH. WHEN JOINTS ARE NECESSARY, OVERLAP MATERIAL BETWEEN 2 STAKES AND FASTEN SECURELY.

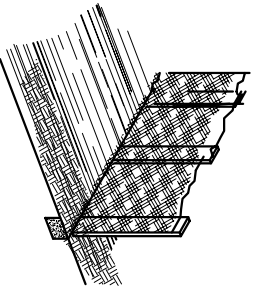

**D.** BACKFILL AND COMPACT THE EXCAVATED SOIL.

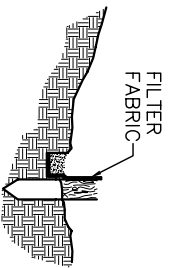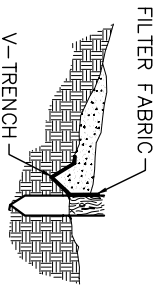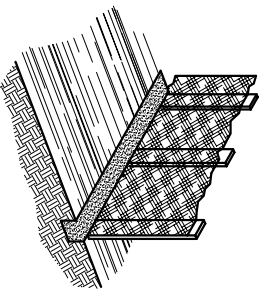

SILT FENCE

TEMPORARY EROSION CONTROL

REVISIONS:  
AUG. 1999

DATE  
APPROVED:  
MAY 1997

PAGE No.  
600-13